 
 


14K White/Blue			
	White	Blue	Special
Sunrise	0% @ 6:00AM	5% @ 6:00AM	0% @ 8:00AM
Midday	100% @ 8:00 AM	100% @ 7:00 AM	75% @ 10:00 AM
Sunset	100% @ 5:00 PM	100% @ 7:00 PM	75% @ 4:00 PM
Night	0% @ 7:00 PM	5% @ 8:00 PM	0% @ 6:00 PM

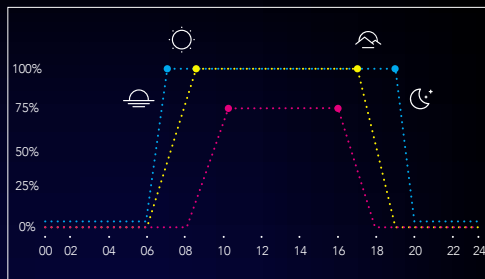

20K – Heavy Blue			
	White	Blue	Special
Sunrise	0% @ 6:00AM	5% @ 6:00AM	0% @ 8:00AM
Midday	50% @ 8:00 AM	100% @ 7:00 AM	75% @ 10:00 AM
Sunset	50% @ 5:00 PM	100% @ 7:00 PM	75% @ 4:00 PM
Night	0% @ 7:00 PM	5% @ 8:00 PM	0% @ 6:00 PM

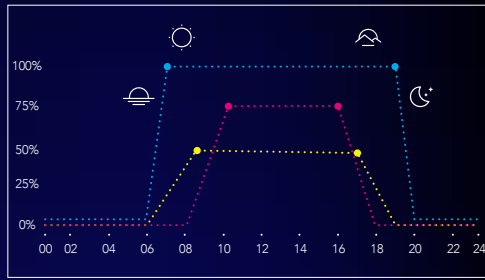

Set Thunderstorm Mode - The advanced settings allow you to control the time period storms will occur in a 24 hour period, the number of storms during this set time and the frequency at which a storm period is activated.

1. Hold Select/Lock for 3 seconds to unlock controller
2. Press Home/Menu to enter main menu
3. Press Home/Menu to toggle through options
4. Press Select/Lock to select 5) Set Thunderstorm menu
5. Press Home/Menu to set Start/End Hour
6. Press Select/Lock to adjust Start/End Hour. Press Home/Menu to toggle through options
7. Press Home/Menu to return to previous menu
8. Press Select/Lock to adjust Enable Thunderstorm > Yes/No
9. Press Home/Menu to set Per Day and Frequency
10. Press Select/Lock to adjust Per Day
11. Press Home/Menu to set Frequency
12. Press Select/Lock to adjust Frequency
13. Press Home/Menu to return to main menu

Factory Reset

 
1. Hold Select/Lock button for 3 seconds to unlock controller
2. Press Home/Menu button to enter main menu
3. Press Home/Menu button to select Factory Reset
4. Press Select/Lock button to select YES
5. Press Home/Menu button to set Factory Reset

Warranty

MicMol warrants all MicMol products to be free from manufacturing defects for one year from the original purchase date when purchased through an authorized MicMol retailer. This warranty does not cover any damages caused by misuse, neglect, alterations or improper handling / transport / maintenance / installation. Physical damages are not covered by warranty. MicMol does not cover personal injury, personal loss, or other damages associated with the use of our products. In order to request warranty service, please email us at support@micmol.com. A purchase receipt is required for any warranty service. Products requiring warranty service must be returned to MicMol or authorized MicMol retailer. You are responsible for the cost of shipping a warranty claim to MicMol and any damages that may occur during transit. Once a returned product has been inspected, it will be repaired or exchanged at our discretion and returned to you. Thank you very much.



AQUA Air Series

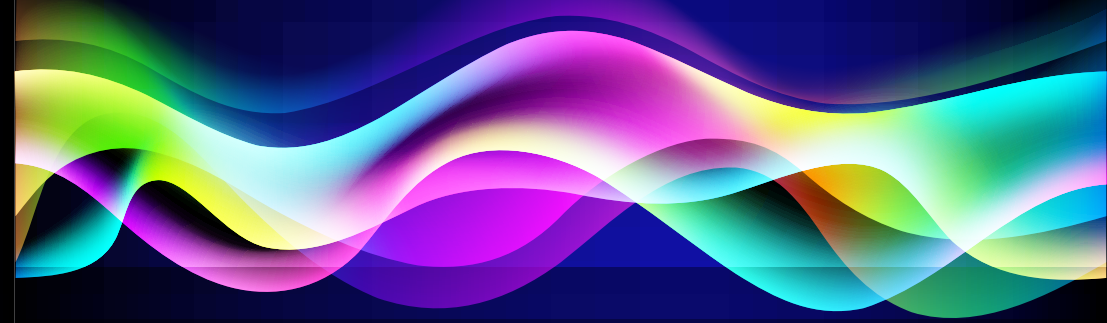

Overview what's in the box



Aqua Air



 
Controller



Power Supply




Super Bracket

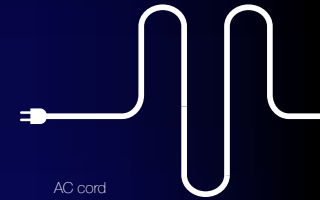

AC cord

Getting Started

 Congratulations on purchasing your *Aqua Air*. Read this guide to get started.

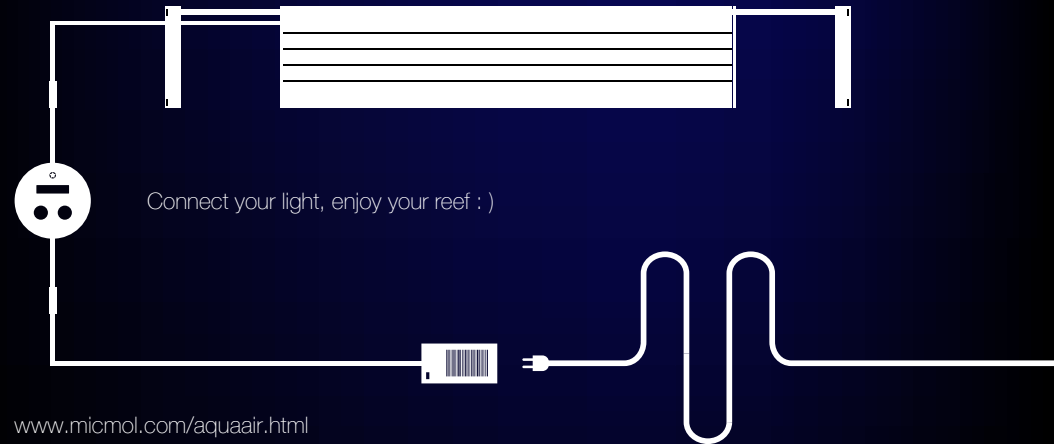

www.micmol.com/aquair.html
www.micmol.com/support.html
www.micmol.com/programsettings.html

© 2017 MicMol Limited. All rights reserved.

MicMol, the MicMol logo, Aqua Air, Aqua mini, Aqua Pro are trademarks of MicMol registered.
M017-0412-A Printed in China



AQUA Air Controller Setup



- Home / Menu : Browse menu.
Special function : Hold for 3 seconds to return to the previous menu.
- Select / Lock : Enter the sub-menu to adjust the parameters.
Special function : Hold for 3 seconds to unlock system.

Set Clock

- Hold Select/Lock for 3 seconds to unlock controller
- Press Home/Menu to enter main menu
- Press Home/Menu to toggle through options
- Press Select/Lock to select 1) Set Clock menu
- Press Select/Lock to adjust Time. Press Home/Menu to toggle through options
- Press Home/Menu to return to main menu

Set LEDs

WHITE – White and Warm White LEDs

- Hold Select/Lock for 3 seconds to unlock controller
- Press Home/Menu to enter main menu
- Press Home/Menu to toggle through options
- Press Select/Lock to select 2) Set White menu
- Press Select/Lock to adjust Sunrise Time. Press Home/Menu to toggle through options
- Press Home/Menu to select Intensity
- Press Select/Lock to adjust Intensity. Press Home/Menu to toggle through options
- Press Home/Menu to move to next setpoint
- Repeat Steps 5-8 for Midday, Sunset, and Night
- Press Home/Menu to return to main menu

 
BLUE – Blue and Royal Blue LEDs

- Hold Select/Lock for 3 seconds to unlock controller
- Press Home/Menu to enter main menu
- Press Home/Menu to toggle through options
- Press Select/Lock to select 3) Set Blue menu
- Press Select/Lock to adjust Sunrise Time. Press Home/Menu to toggle through options
- Press Home/Menu to select Intensity
- Press Select/Lock to adjust Intensity. Press Home/Menu to toggle through options
- Press Home/Menu to move to next setpoint
- Repeat Steps 5-8 for Midday, Sunset, and Night
- Press Home/Menu to return to main menu

SPECIAL – Red, Green and UV LEDs

- Hold Select/Lock for 3 seconds to unlock controller
- Press Home/Menu to enter main menu
- Press Home/Menu to toggle through options
- Press Select/Lock to select 4) Set Special menu
- Press Select/Lock to adjust Sunrise Time. Press Home/Menu to toggle through options
- Press Home/Menu to select Intensity
- Press Select/Lock to adjust Intensity. Press Home/Menu to toggle through options
- Press Home/Menu to move to next setpoint
- Repeat Steps 5-8 for Midday, Sunset, and Night
- Press Home/Menu to return to main menu

The Aqua Air Controller will gradually ramp the intensity of LED between set points. The graph below outlines how the LEDs will ramp up and down between settings.

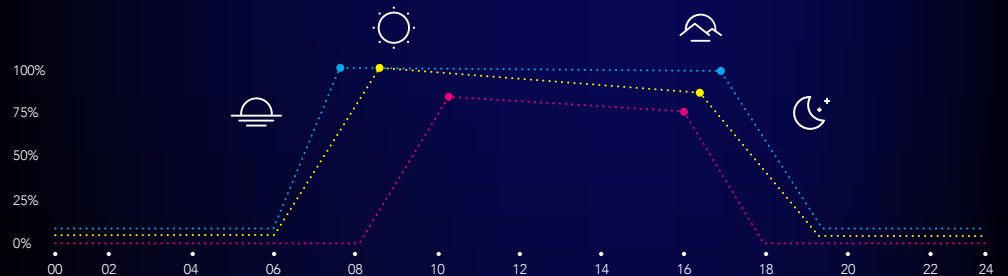

The sample settings below can be used to create different color spectrums in your tank.

10K White			
	White	Blue	Special
Sunrise	0% @ 6:00AM	5% @ 6:00AM	0% @ 8:00AM
Midday	100% @ 8:00 AM	50% @ 7:00 AM	75% @ 10:00 AM
Sunset	100% @ 5:00 PM	50% @ 7:00 PM	75% @ 4:00 PM
Night	0% @ 7:00 PM	5% @ 8:00 PM	0% @ 6:00 PM

