
# Quick Start Guide




Congratulations on purchasing your Aqua CC Read this guide to get started to installing and setting your lighting

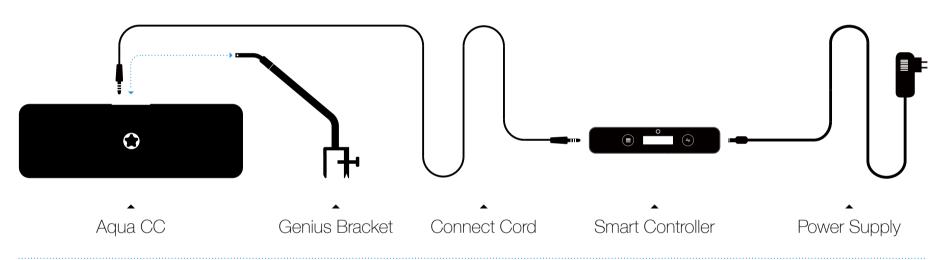



# How to install the genius bracket



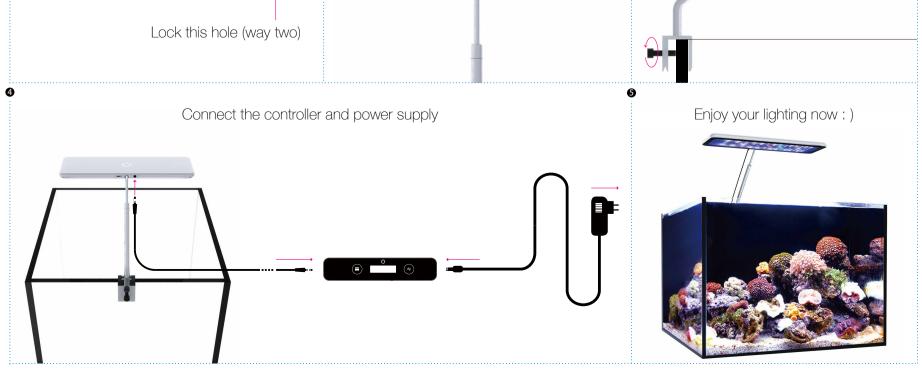




Clock Mode System Lock

Home / Menu - Browse menu.

Special Function 1 : Hold on 3 second to return to the previous menu. Special Function 2 : Hold on 3 second under locked to switch Auto & Manual mode.

Select / Adjust - Enter the sub-menu to adjust the parameters. Special Function 1: Hold on 3 second to unlock system.

 Special Function 2: Hold on 3 second to lock system.



# Setting up your Aqua CC now

#### 1) Set Clock

- 1. Hold 😑 Select/Lock for 3 seconds to unlock controller
- 2. Press 🔳 Home/Menu to enter main menu
- 3. Press 🔳 Home/Menu to toggle through options
- 4. Press 🗐 Select/Lock to select 1) Set Clock menu
- 5. Press 🕤 Select/Lock to adjust time.
- 6. Press = Home/Menu to toggle through options
- 7. Press 🔳 Home/Menu to return to main menu

## 2) Auto Mode - Set LEDs (e.g: Set White Channel)

1. Hold 🔄 Select/Lock for 3 seconds to unlock controller

- 2. Press 🗉 Home/Menu to enter main menu
- 3. Press  $\textcircled{\sc i}$  Home/Menu to toggle through options
- 4. Press 🖷 Select/Lock to select 2) Auto Mode menu
- 5. Press Select/Lock to select Set White menu
- 6. Press Select/Lock to adjust Dawn time.
- 7. Press Home/Menu to toggle through options 8. Press Home/Menu to select Intensity
- 9. Press a Select/Lock to adjust Intensity.
- 10. Press (=) Home/Menu to toggle through options
- 11. Press (=) Home/Menu to move to next setpoint

12. Repeat Steps 5-9 for Sunrise, Midday, Sunset, Dusk and Night

13. Press (=) Home/Menu to return to main menu

# Auto Mode (Set Blue & Special Channel)

Set the Blue Channel and Special Channel which is same as the White Channel operate step.

	Set	Blue
	Set	Special

# 3) Manual Mode

Set White Set Blue

- 1. Press 🔄 Select/Lock to select 3) Manual Mode menu
- 2. Press Home/Menu to adjust Enable Manual Mode > Yes/No
- 3. Press 🕞 Select/Lock to enter the channel selection list
- 6. Press = Home/Menu to return to main menu
- o. riess 🗉 nome/vienu to return to main menu

# 4) Lightning

The advanced settings allow you to control the time period storms will occur in a 24 hour period, the number of storms during this set time and the frequency at which a storm period is activated.

Sunset 03:00 PM Intensity 100% Dusk 07:00 PM Intensity 050% Niaht 10:00 PM Intensity 001%

Manual Mode
 Lishtning

3) Manual Mode

YES/NO

100%

100%

100%


Enable

White

Blue

5pecial

The Control system will gradually ramp the intensity of LED between set points. The graph below outlines how the LEDs will ramp up and down between settings.

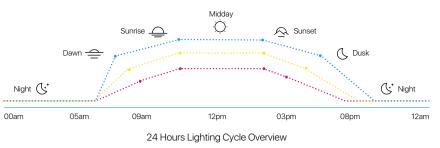


# The sample settings below can be used to create different color spectrums in your tank.

10K White for Fish Tank						
/	Dawn	Sunrise	Midday	Sunset	Dusk	Night
White	0%	80%	100%	100%	80%	0%
Channel A	@6:00AM	@ 8:00 AM	@ 12:00 PM	@ 3:00 PM	@ 6:00 PM	@ 8:00 PM
Blue	1%	25%	50%	50%	25%	1%
Channel B	@6:00AM	@ 7:00 AM	@ 10:00 AM	@ 3:00 PM	@ 6:00 PM	@ 8:00 PM
Special	0%	50%	75%	75%	50%	0%
Channel C	@6:00AM	@ 8:00 AM	@ 12:00 PM	@ 3:00 PM	@ 6:00 PM	@ 8:00 PM

	15K White & Blue for LPS					
/	Dawn	Sunrise	Midday	Sunset	Dusk	Night
White	0%	80%	100%	100%	80%	0%
Channel A	@6:00AM	@ 8:00 AM	@ 12:00 PM	@ 3:00 PM	@ 6:00 PM	@ 8:00 PM
Blue	1%	80%	100%	100%	80%	1%
Channel B	@6:00AM	@ 7:00 AM	@ 10:00 AM	@ 3:00 PM	@ 6:00 PM	@ 8:00 PM
Special	0%	50%	75%	75%	50%	0%
Channel C	@6:00AM	@ 8:00 AM	@ 12:00 PM	@ 3:00 PM	@ 6:00 PM	@ 8:00 PM

20K Heavy Blue for SPS						
/	Dawn	Sunrise	Midday	Sunset	Dusk	Night
White	0%	25%	50%	50%	25%	0%
Channel A	@6:00AM	@ 8:00 AM	@ 12:00 PM	@ 3:00 PM	@ 6:00 PM	@ 8:00 PM
Blue	1%	80%	100%	100%	80%	1%
Channel B	@6:00AM	@ 7:00 AM	@ 10:00 AM	@ 3:00 PM	@ 6:00 PM	@ 8:00 PM
Special	0%	50%	75%	75%	50%	0%
Channel C	@6:00AM	@ 8:00 AM	@ 12:00 PM	@ 3:00 PM	@ 6:00 PM	@ 8:00 PM

6500K White for Planted						
	Dawn	Sunrise	Midday	Sunset	Dusk	Night
W-White	0%	25%	50%	50%	25%	0%
Channel A	@6:00AM	@ 8:00 AM	@ 12:00 PM	@ 3:00 PM	@ 6:00 PM	@ 8:00 PM
White	0%	80%		100%	80%	0%
Channel B	@6:00AM	@ 7:00 AM		@ 3:00 PM	@ 6:00 PM	@ 8:00 PM
Special	0%	50%	75%	75%	50%	0%
Channel C	@ 6:00AM	@ 8:00 AM	@ 12:00 PM	@ 3:00 PM	@ 6:00 PM	@ 8:00 PM

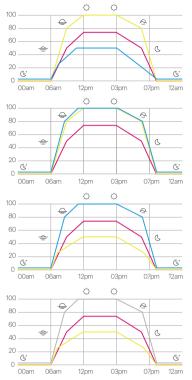

# Information

WARNING: Never put the light and the smart controller in the water. Doing so may be dangerous and damage your light.

# Important Handling Information

NOTICE: Failure to follow these handling instructions could result in damage to your Aqua CC or other property.

Carrying your Aqua CC before you move your Aqua CC, shut it down and disconnect all cables and cords connected to it. Using power cord Never force a connector into a port. Don't put the power cord into your tank when it connected. When you Setup your Aqua CC please make sure that it locate power supply where it will not be exposed to any water or moisture.

Mount your power supply where it won't get wet. Include a "drip loop" - a tied loop of cord hanging down below the level of the electrical outlet. That way, if water happens to run down the cord from the tank, it will drip off onto the floor rather than into the outlet. Drip Loops should always be used to help prevent water from traveling along the cord and coming into contact with an electrical outlet. Drip loops must always be below the level of the outlet. If the plug or outlet does get wet, DO NOT TOUCH the cord.

Storing your Aqua CC If you are going to store your Aqua CC for an extended period of time, keep it in a cool location (ideally, 71° F or 22° C).

When cleaning the outside of your Aqua CC, first shut down your Aqua CC and unplug the power cord. Then use a damp, soft, lint-free cloth to clean the lamp exterior. Avoid getting moisture in any openings. Do not spray liquid directly on the lamp. Do not use aerosol sprays, solvents, or abrasives that might damage the finish.

# MicMol and the Environment

MicMol. recognizes its responsibility to minimize the environmental impact of its operations and products

0

## Warranty

MicMol warrants all MicMol products to be free from manufacturing defects for one year from the original purchase date when purchased through an authorized MicMol retailer. This warranty does not cover any damages caused by misuse, neglect, alterations or improper handling / transport / maintenance / installation. Physical damages are not covered by warranty. MicMol does not cover personal injury, personal loss, or other damages associated with the use of our products. In order to request warranty service, please email us at support@micmol.com. A purchase receipt is required for any warranty service. Products requiring warranty service must be returned to MicMol or authorized MicMol retailer. You are responsible for the cost of shipping a warranty claim to MicMol and any damages that may occur during transit. Once a returned product has been inspected, it will be repaired or exchanged at our discretion and returned to you. Thank you very much.



1) Set Clock

2) Auto Mode

1) Set Clock

10:29 AM

Set Spec	ial
	•
Dawn	06:00 AM
Intensity	, 001%
Sunrise	07:00 AM
Intensity	, 050%
Midday	12:00 PM
Intensity	, 100%

#### 2. Press 🗐 Home/Menu to enter main menu

- 3. Press 🖲 Home/Menu to toggle through options
- 4. Press 😔 Select/Lock to select 5) Set Lightning menu
- 5. Press 😔 Select/Lock to adjust Enable Lightning > Yes/No
- 6. Press (
  Home/Menu to set Start/End Hour
- 7. Press 😔 Select/Lock to adjust Start/End Hour.
- 8. Press (I) Home/Menu to enter next menu
- 9. Press I Home/Menu to set Per Day and Frequency
- 10. Press 🕞 Select/Lock to adjust Per Day
- 11. Press I Home/Menu to set Frequency
- 12. Press 🔄 Select/Lock to adjust Frequency
- 13. Press 🔳 Home/Menu to return to main menu

## 5) Demo

Press ■ Home/Menu button to enter main menu
 Press ■ Home/Menu button to select 5) DEMO
 Press ● Select/Lock button to select YES
 Note: The DEMO will show all your settings in 1 minute.

#### 6) Factory Reset

- 1. Press Home/Menu button to enter main menu
- 2. Press 🔳 Home/Menu button to select 6) Factory Reset
- 3. Press 🔄 Select/Lock button to select YES
- 4. Press 🗉 Home/Menu button to set Factory Reset



(3) Manual Mode



6) Factory Reset

6) Factory Reset

Reset Now YES/NO

5) Demo

# OMICMOL

© 2012~2018 MicMol Limited. All rights reserved. MicMol, the MicMol Logo, Aqua CC, Aqua mini, Aqua Pro, Aqua Air, BloomBee are trademarks of MicMol registered. ACC008-1806-A Printed in China.